



910-993100-017

**IMPORTANT SAFETY INSTRUCTIONS**

When using your telephone equipment, basic safety precautions, should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not place this product where the cord will be abused by persons walking on it.
9. Some telephones require AC power from the outlet. Do not overload wall outlets or extension cords as this can result in the risk of fire or electric shock.
10. Never push objects of any kind into the product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman if service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power supply cord or plug is damaged or frayed.
  - B. If liquid has been spilled on the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualify technician to restore the product to normal operation.
  - E. If the product has been dropped or the cabinet has been damaged.
  - F. If the product exhibits a distinct change in performance.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
14. Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

**WARRANTY**

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the original purchaser.

Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the original customer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday to Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

**CROSLEY  
RADIO**

ATTN: RETURNS DEPT  
2001 PRODUCTION DRIVE  
BAY 2 & 3  
LOUISVILLE, KY 40299

CROSLEY RADIO assumes no responsibility for units sent without prior Return Authorization.

The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit.

The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio, high standards of Quality and Workmanship.

## SET UP DIAL MODE

The DIAL MODE switch is located at the bottom of the telephone. Slide the switch to TONE unless you have Dial-Pulse (Rotary) telephone service in your area, in which case, slide the switch to the PULSE position.

## RINGER CONTROL

The RINGER CONTROL switch on the bottom of the phone allows you to adjust the ringer volume.

## RECEIVER VOLUME

The RECEIVER VOLUME CONTROL switch, located on the bottom of the phone, allows you to adjust the volume of the handset from LOW and HI.

## HANDSET CORD

To assemble, insert the end of the handset cord into the HANDSET CORD JACK located on the bottom of the telephone body.

## INSTALLATION

To connect the telephone, connect one end of the line cord to the wall jack. Connect the other end to the LINE JACK on the bottom of the phone.

## MAKING AND ANSWERING CALLS

To get a dial tone or answer an incoming call, lift the handset.

To hang up, either replace the handset or press the HANDSET CRADLE manually.

To redial the last number, lift handset and press the redial button.

## TROUBLESHOOTING

If you experience problems with your telephone, try the following suggestions:

### NO DIAL TONE

- 1) Make sure that all plugs are connected properly. Check the connections at the wall jack, the telephone cabinet and handset.
- 2) Try another modular jack within your home which you know to be working properly.

### CALLS CANNOT BE DIALED OR DIALED SLOWLY

Check to make sure that the DIAL MODE switch is in the correct position for the type of service (TONE/PAUSE) available in your area.

### TELEPHONE DOES NOT RING

Check that RINGER CONTROL switch is not set to OFF.

If there are several telephones connected to the same line, try disconnecting some of the other telephones. Having too many telephones connected to the same line can cause low ringer volume or poor sound quality during calls.

### CARE AND MAINTENANCE

Avoid rough treatment to the telephone. Do not drop the handset and always place it gently back in the cradle. Clean only with slightly dampened cloth. Do not use detergent, wax, solvent, spray, alcohol or excessive water.

## LOCATION OF PARTS

